



Updating the Design - What Happens When Things Change?

Ian Joyce
Senior Application Engineer



Design Changes

- Most roadway projects have many design changes throughout the lifecycle of the project
- OpenRoads Designer is designed to handle and accommodate design changes fairly easily
- Design Intent along with the rules and relationships that exist in the OpenRoads Model provide a means for dynamic updates when design changes occur
- It's important to understand how to make changes and to be aware of what happens when changes are made

Design Changes

- How to make changes?
- What happens when you make changes and how the OpenRoads Model updates based on those changes?

Terrain Model Updates and Changes

What Happens When the Terrain Model is Updated?

- Terrain model changes will typically affect vertical geometry, corridors, subsurface utilities and drainage structures
- OpenRoads elements are ruled and associated to the Active Terrain Model when an element is:
 1. Snapped to the terrain
 2. Elements are draped or offset from the terrain
 3. End Conditions target the terrain
- Even if the content within the Terrain Model changes (it gets updated) the rules do not break because the Terrain Model, as a container, is still intact

FileHomeTerrainGeometryCorridorsModel DetailingDrawing ProductionDrawingView

NoneDefault

00000

Attributes

Explorer

Attach Tools

Models

Level Display

Primary

Element Selection

Selection

Reports

Civil Analysis

Corridor Reports

Model Analysis and Reporting

Terrain Import

Import Geometry

Import IRD



Model Import/Export

OpenRoads Help

Open RSS Reader

OpenRoads Help

No Feature Definition

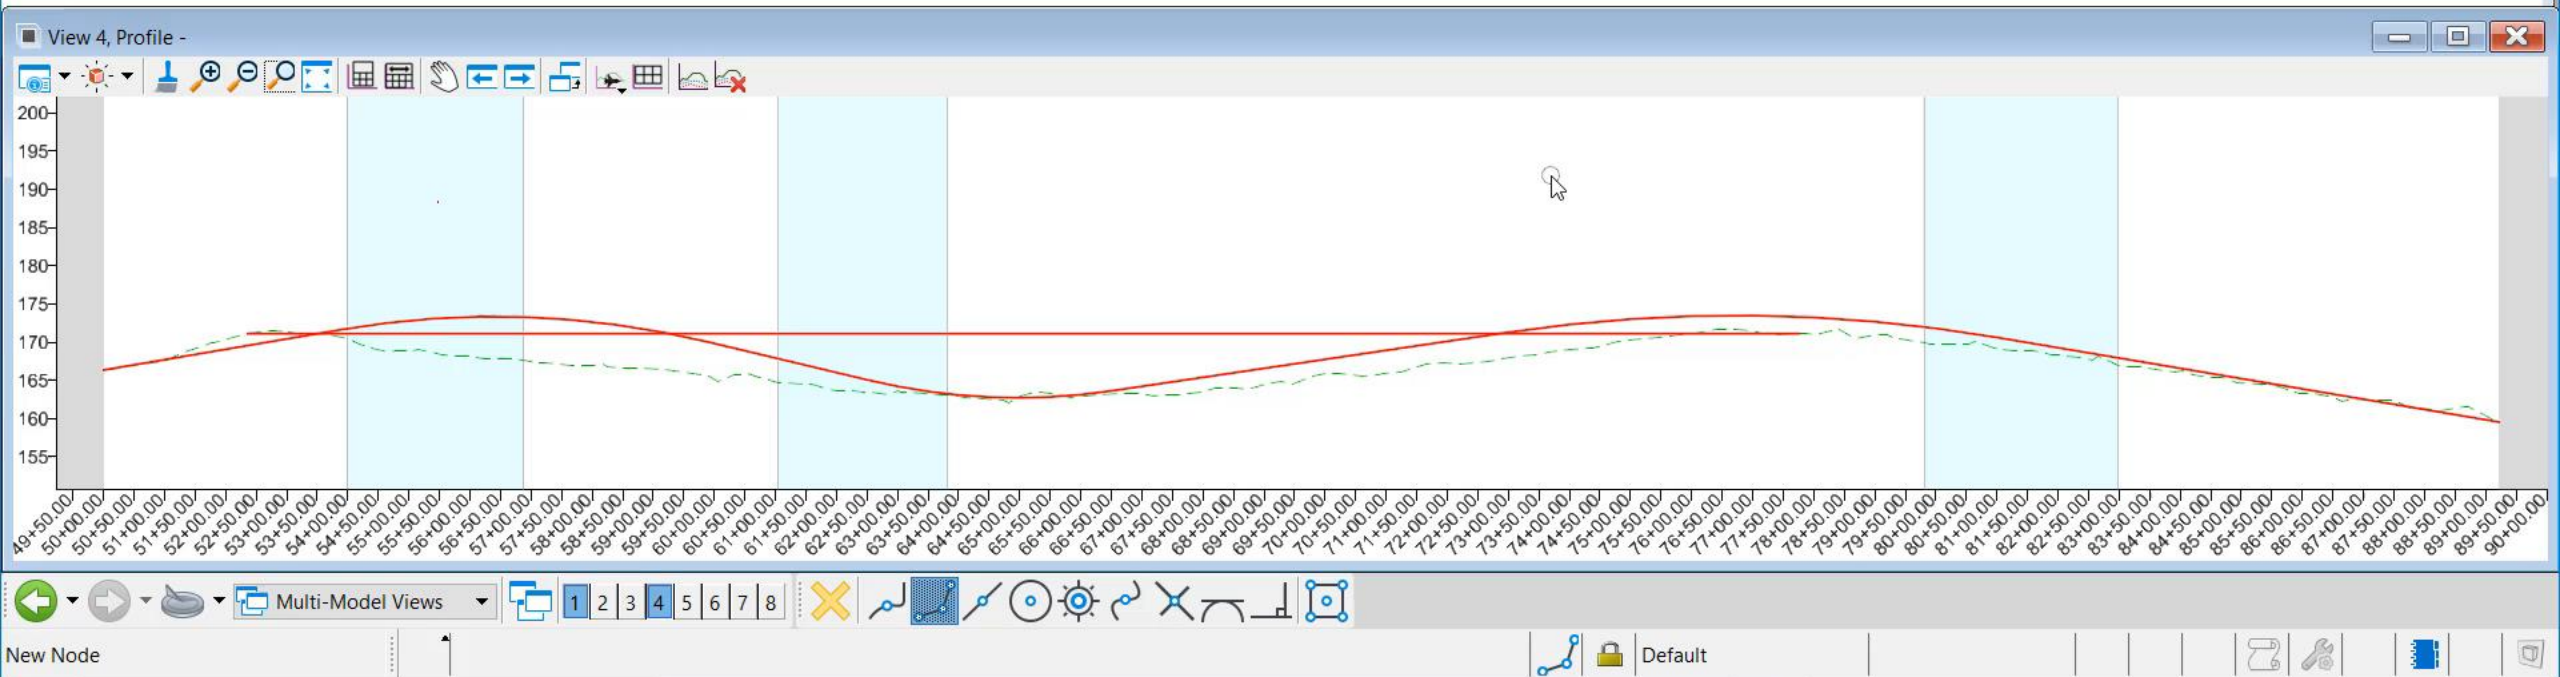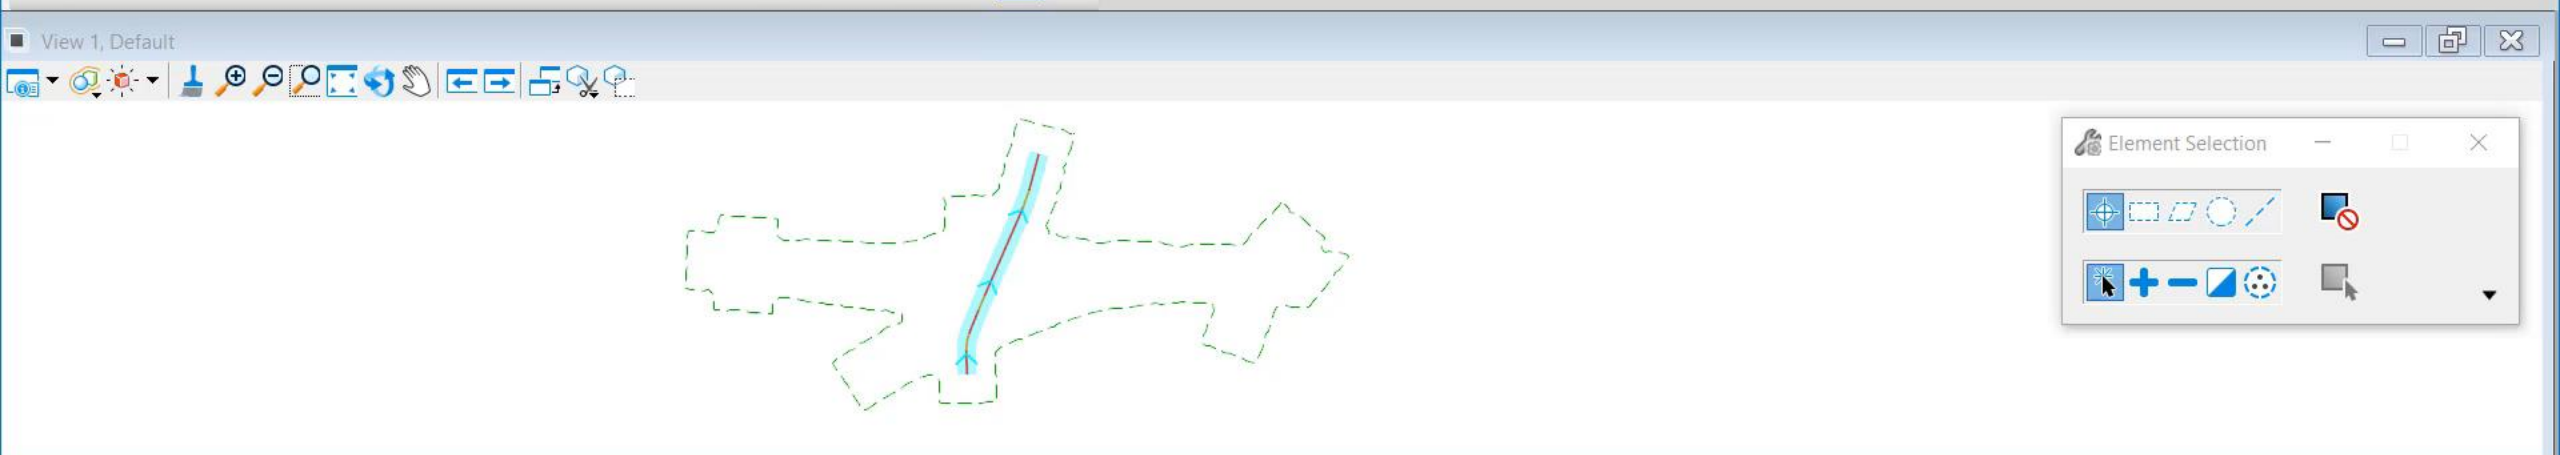

FileHomeTerrainGeometryCorridorsModel DetailingDrawing ProductionDrawingView

NoneDefault

00000

Attributes

Explorer

Attach Tools

Models

Level Display

Primary

Element Selection

Selection

Reports

Civil Analysis

Corridor Reports

Model Analysis and Reporting

Terrain Import

Import Geometry

Import IRD

Model Import/Export


OpenRoads Help

Open RSS Reader

OpenRoads Help


No Feature Definition

View 1, Default

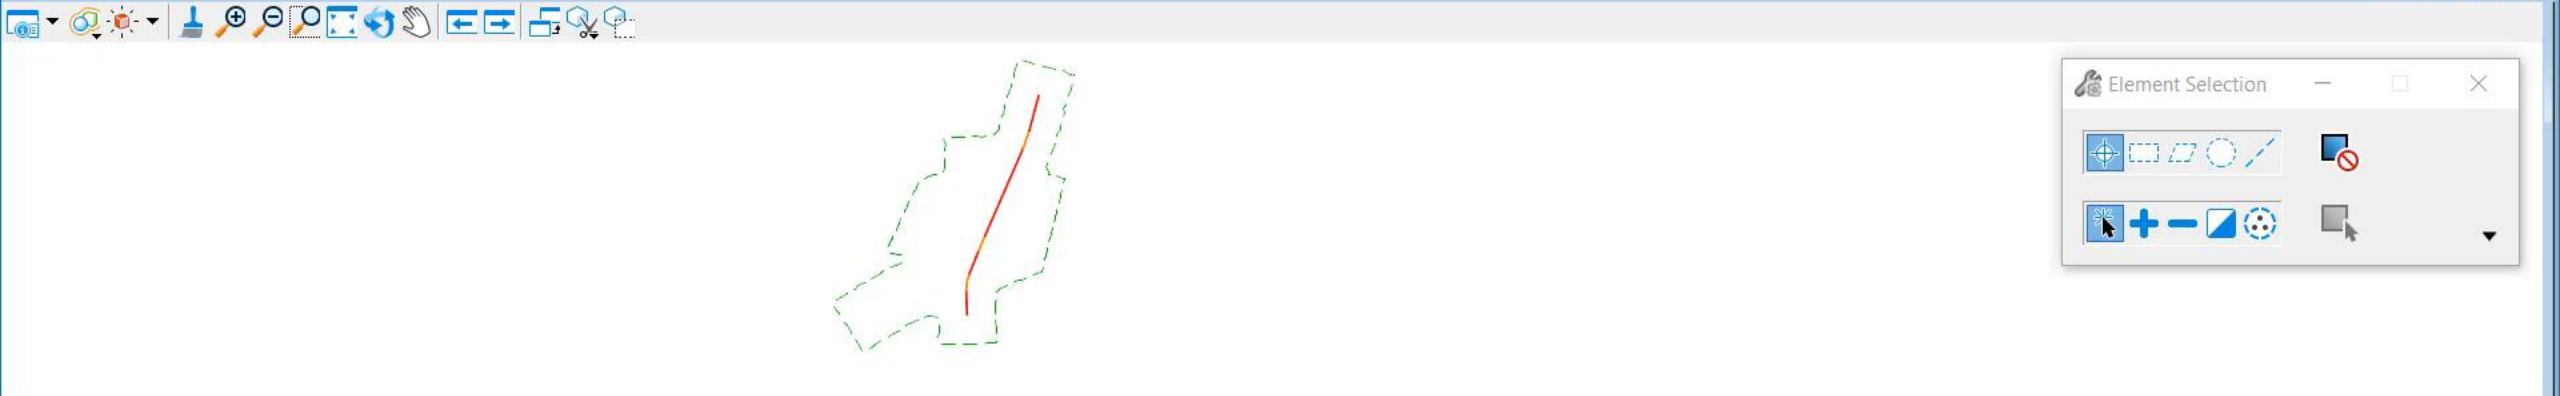

Element Selection

View 4, Profile -

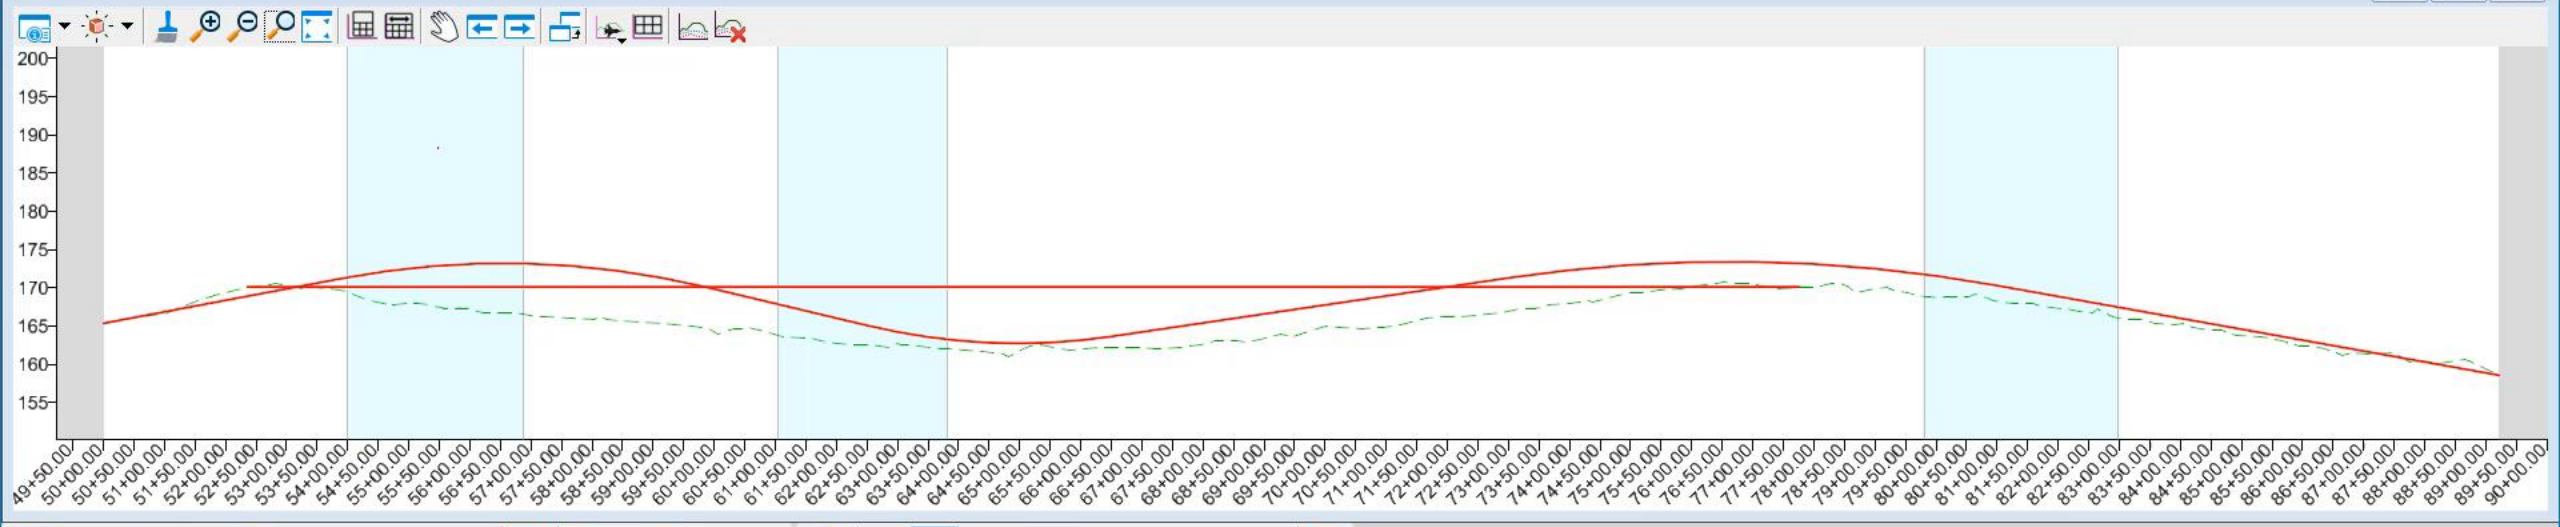

Multi-Model Views

12345678

Horizontal Geometry Updates and Changes

How To...

- Insert PI
 - Use Insert Vertex to insert PI to horizontal alignment
- Delete PI and Remove Curves
 - Use Delete Vertex to remove PI's which in turn remove horizontal curves
- Insert Curves
 - Use Insert Fillet tool if you need to insert a curve or curve combinations between tangents on previously create alignment
- Append Elements
 - If you need to add additional elements to the beginning or end of alignment
- Really Mess Things Up
 - What not to do!

OpenRoads Modeling C:\Presentations\What Happens When Things Change\Geometry - Options.dgn [2D - V8 DGN] - OpenRoads Designer CONNECT Edition

File Home Terrain Geometry Corridors Model Detailing Drawing Production Drawing View

Search Ribbon (F4)

None Default

Attributes

Explorer

Primary

Selection

Placement

Manipulate

Modify

Measure



Drawing Scales

1"=100'

ACS Plane Lock

Annotation Scale Lock

No Feature Definition

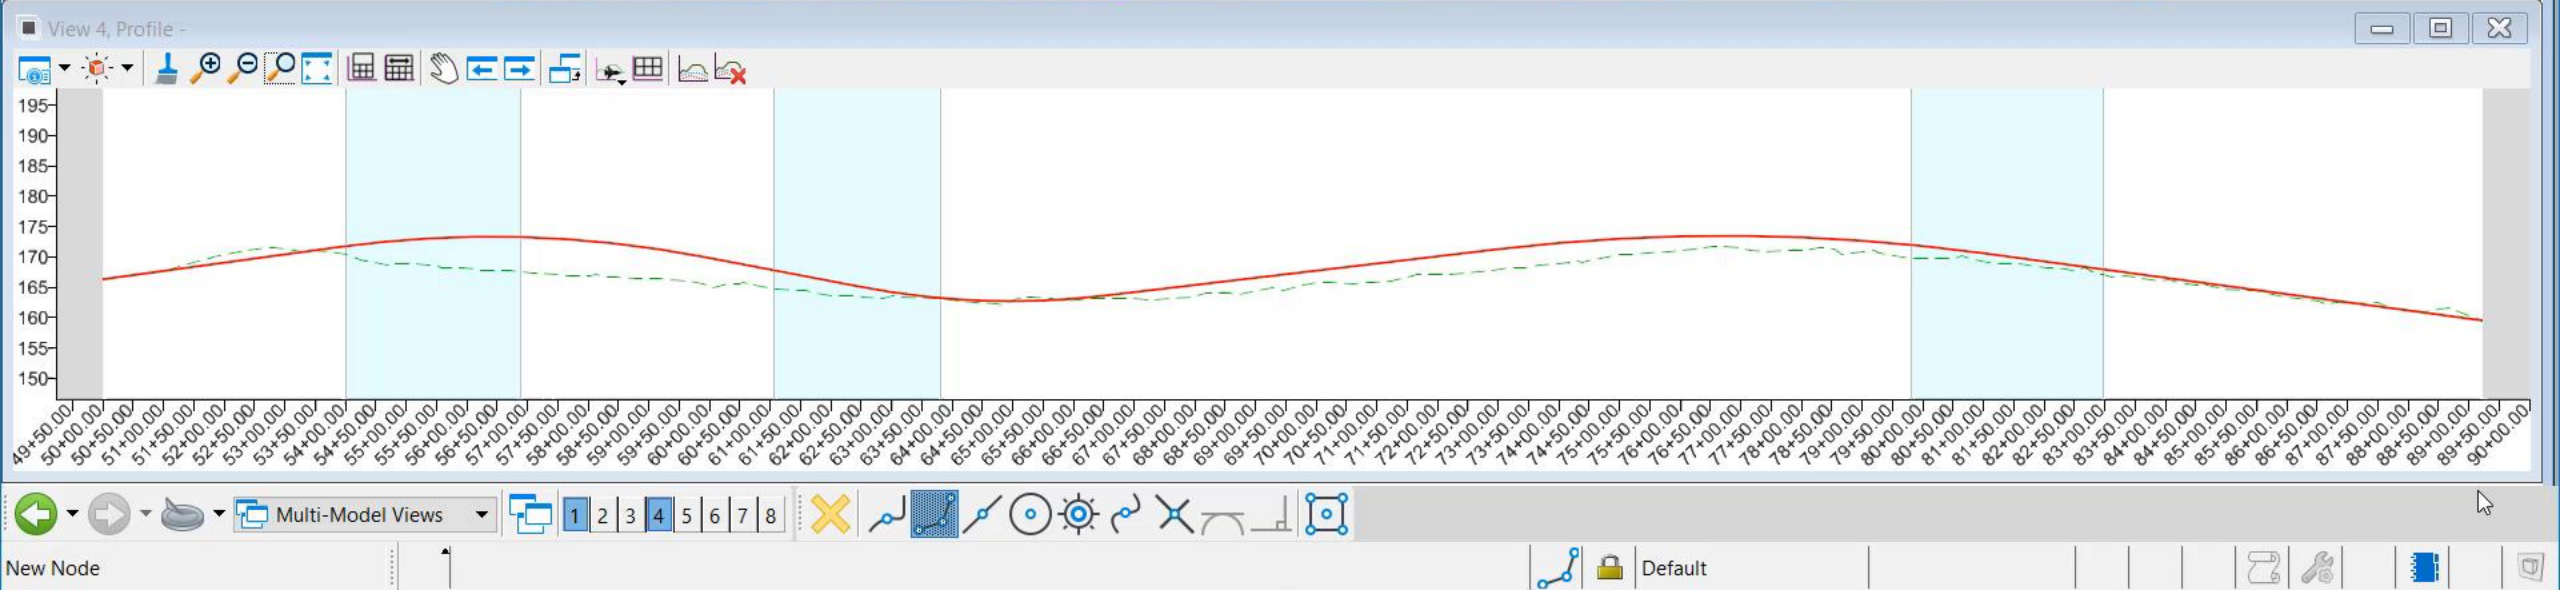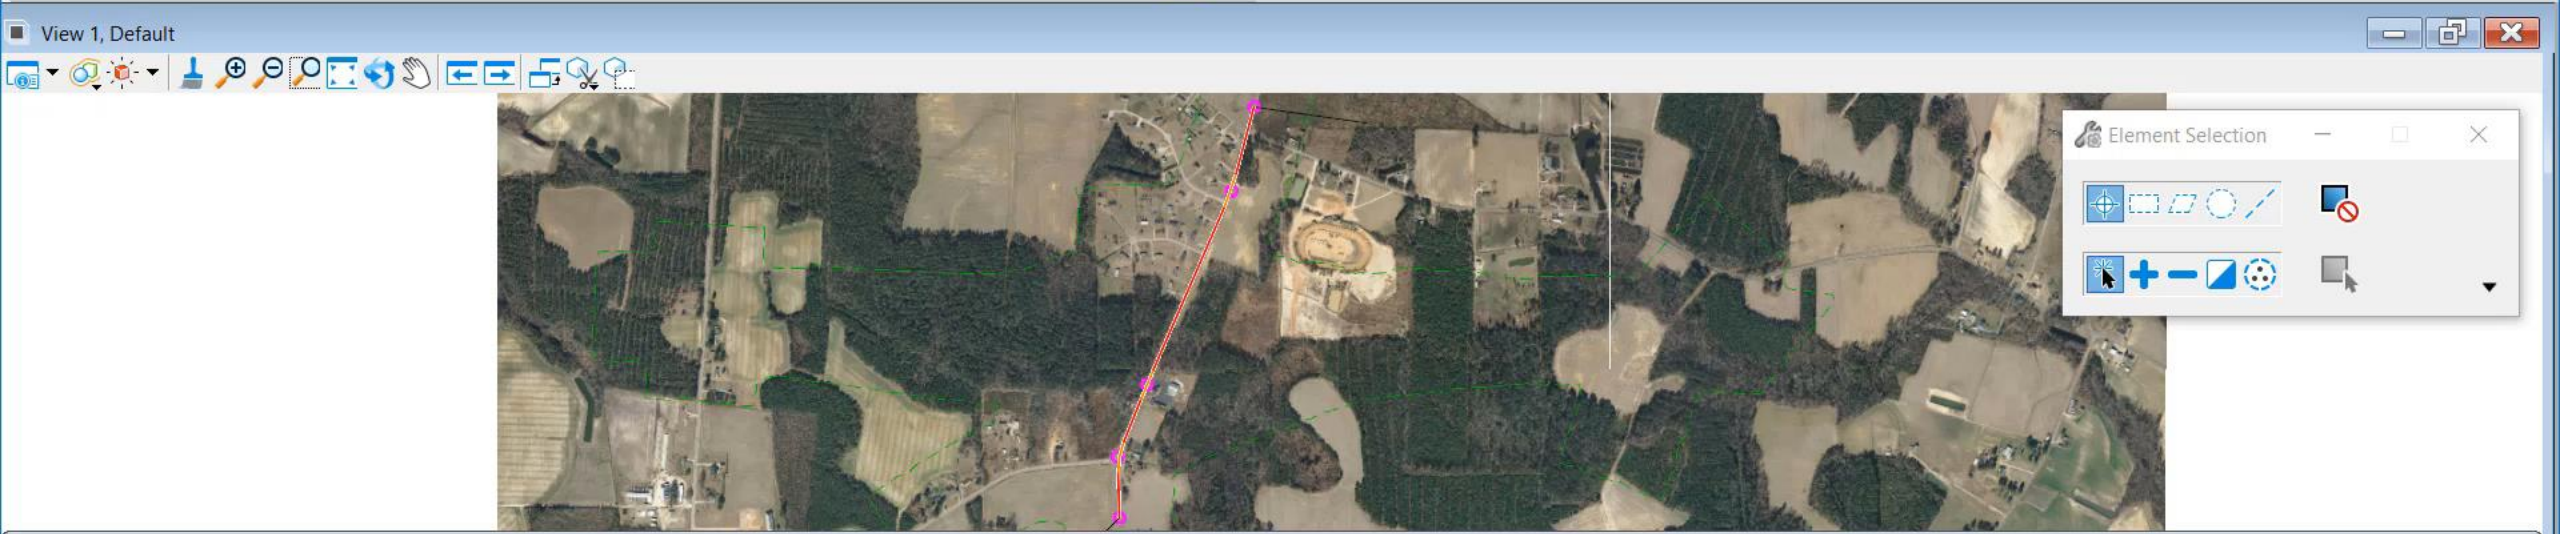

OpenRoads Modeling

File Home Terrain Geometry Corridors Model Detailing Drawing Production Drawing View

Search Ribbon (F4) Sign in

Element Selection

Import/Export Design Elements Standards

Civil Toggles Reports

Lines Arcs Point

Offsets and Tapers Reverse Curves Spirals

Modify Complex Geometry

Open Profile Model Set Active Profile Profile Creation

Lines Curves Complex Geometry Element Profiles

Simplify Geometry Complex Redefine

Common Tools

Geom_Baseline

Explorer

File

Items

OpenRoads Model

Search

OpenRoads Model

Sheet Index

Links

OpenRoads Standards


Subsurface Utilities Model


Survey

Multi-Model Views

1 2 3 4 5 6 7 8

Fit View > Select view to fit

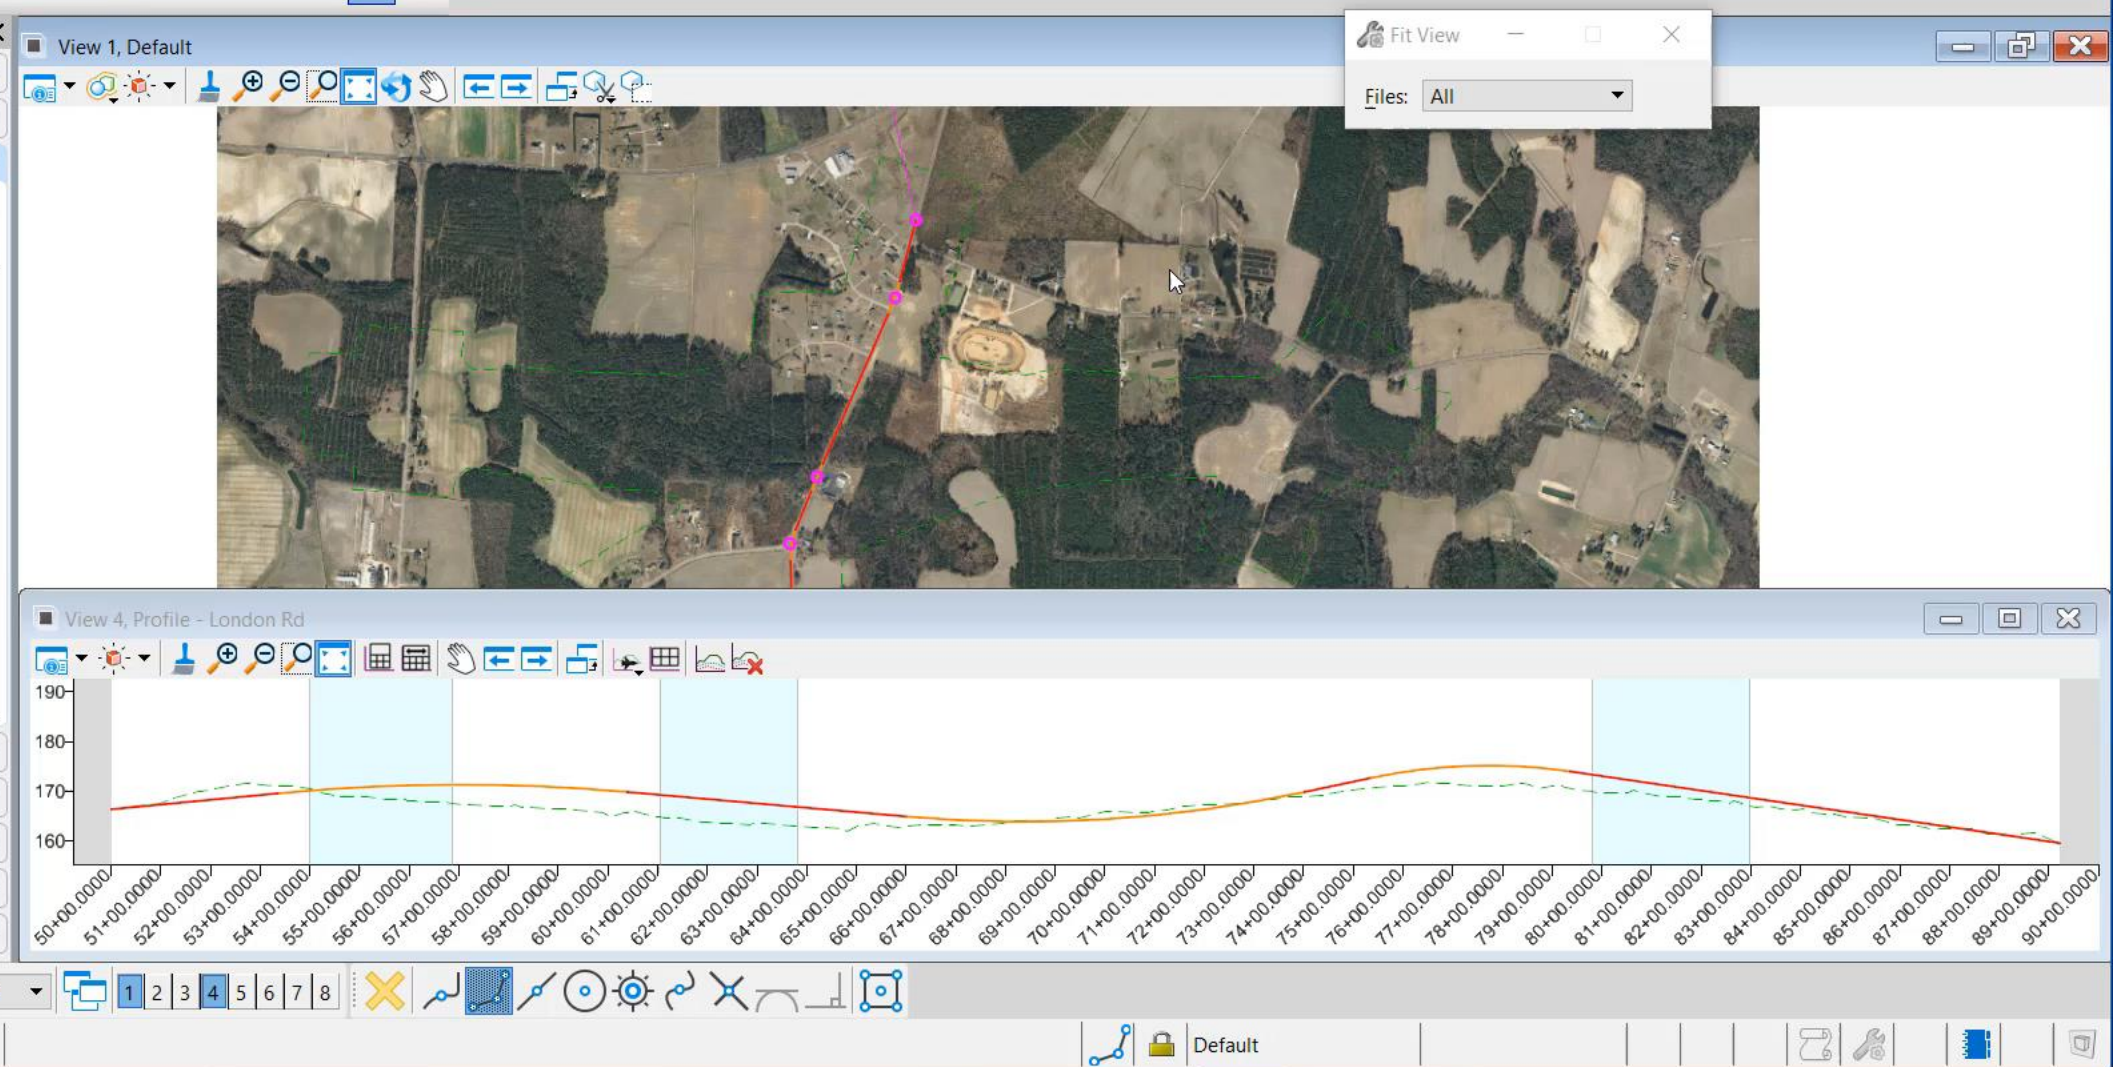



Horizontal Geometry Updates and Changes

- **Properties** tool can also be used to change simple curve to more complex curve combinations

The diagram illustrates the process of updating a simple curve to a more complex curve combination using the Properties tool. It shows two side-by-side panels, each representing a different state of the tool. Red arrows indicate the changes made between the two states.

Left Panel (Initial State):

- Geometry**
 - Start Point: 2320740.914', 759736.786', 0.000'
 - End Point: 2320994.191', 760566.890', 0.000'
 - Length: 870.939'
 - Total Length: 870.939'
 - Arc Sweep Angle: -16°38'01.3"
 - Arc Tangent: 438.554'
 - Total Tangent: 438.554'
 - Arc Deflection: -16°38'01.3"
 - Total Deflection: -16°38'01.3"
 - Start Direction: N08°39'03.2"E
 - End Direction: N25°17'04.5"E
- Feature**
 - Feature Definition: Geom_Baseline
 - Feature Name: Curve 1
- Back Transition**
 - Type: None
- Ahead Transition**
 - Type: None
- Ahead Taper**
 - Method: None
- Fillet Rule**
 - Radius: 3000.000'
 - Back Offset: 0.000'
 - Ahead Offset: 0.000'
 - Trim\Extend: Both
- Back Taper**
 - Method: None

Right Panel (Updated State):

- Geometry**
 - Start Point: 2320725.861', 759637.847', 0.000'
 - End Point: 2321036.936', 760657.379', 0.000'
 - Length: 1070.939'
 - Total Length: 1070.939'
 - Arc Sweep Angle: -12°48'50.3"
 - Arc Tangent: 336.875'
 - Total Tangent: 538.631'
 - Arc Deflection: -12°48'50.3"
 - Total Deflection: -16°38'01.3"
 - Start Direction: N08°39'03.2"E
 - End Direction: N25°17'04.5"E
- Feature**
 - Feature Definition: Geom_Baseline
 - Feature Name: Curve 1
- Back Transition**
 - Type: Spiral
 - Method: Length
 - Length: 200.000'
- Ahead Transition**
 - Type: Spiral
 - Method: Length
 - Length: 200.000'
- Ahead Taper**
 - Method: None
- Fillet Rule**
 - Radius: 3000.000'
 - Back Offset: 0.000'
 - Ahead Offset: 0.000'
 - Trim\Extend: Both
- Back Taper**
 - Method: None

Red arrows indicate the changes made in the Back and Ahead Transition sections, showing the transition from 'None' to 'Spiral' with a specified length.

Horizontal Geometry Updates and Changes

I have an existing complex alignment that I need to redefine over a certain range, substituting in new horizontal geometry. How can I do this yet preserve all rules built off the original geometry? (i.e., other geometry, superelevation, civil cells, etc.)

Answer: **Complex Redefine** command!

Horizontal Geometry Updates and Changes

Complex Redefine

- The command allows an existing complex alignment to be partially redefined over a range, substituting in a new horizontal geometry.
- The command reserves the original feature name, allowing all rules built off the original geometry to update.
- The command affects all rules relating to the alignment (Other geometry, superelevation, corridors, terrains, civil cells, etc. will reprocess to accept the revision.)
- Vertical geometry from the original alignment is preserved and carried forward to the newly formed alignment.
- Segment(s) from the original alignment that are replaced are retained in the model and are allocated a new name.
- Rules over reference files will need to be opened to initiate the update.

OpenRoads Modeling

C:\Presentations\What Happens When Things Change\Geometry\Geom-LondonRd.dgn [2D - V8 DGN] - OpenRoads Designer CONNECT Edition

FileHomeTerrainGeometryCorridorsModel DetailingDrawing ProductionDrawingView

Search Ribbon (F4)

Sign in

Element Selection

Import/Export

Design Elements

Standards

General Tools

Civil Toggles

Reports

Lines

Arcs

Point

Horizontal

Offsets and Tapers

Reverse Curves

Spirals

Modify

Complex Geometry

Open Profile Model

Set Active Profile

Profile Creation

Vertical

Lines

Curves

Complex Geometry



Element Profiles

Common Tools

Simplify Geometry

Complex Redefine

Geom_Baseline

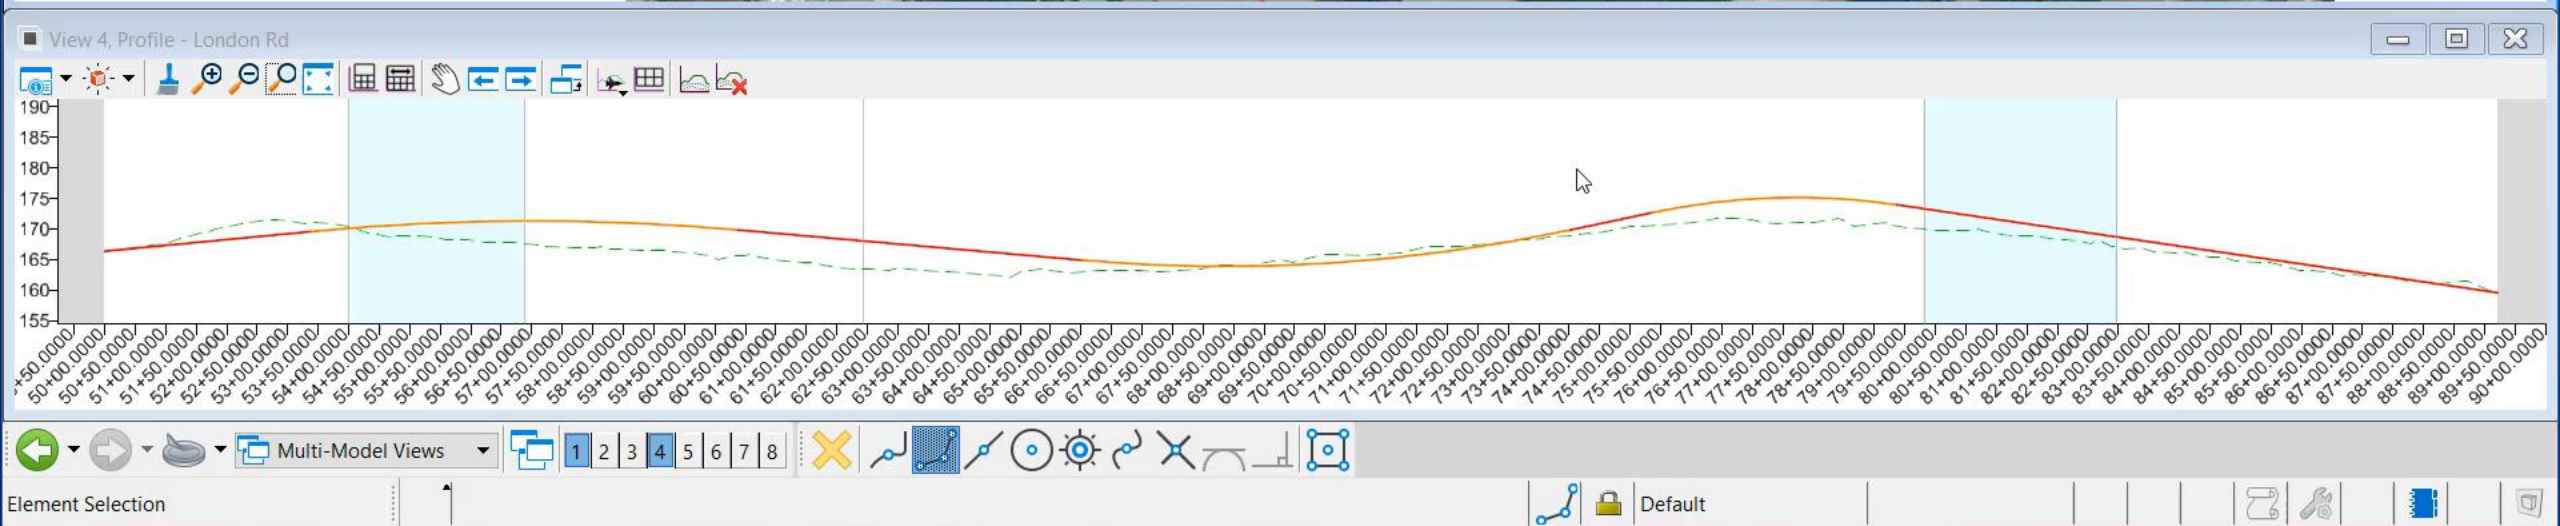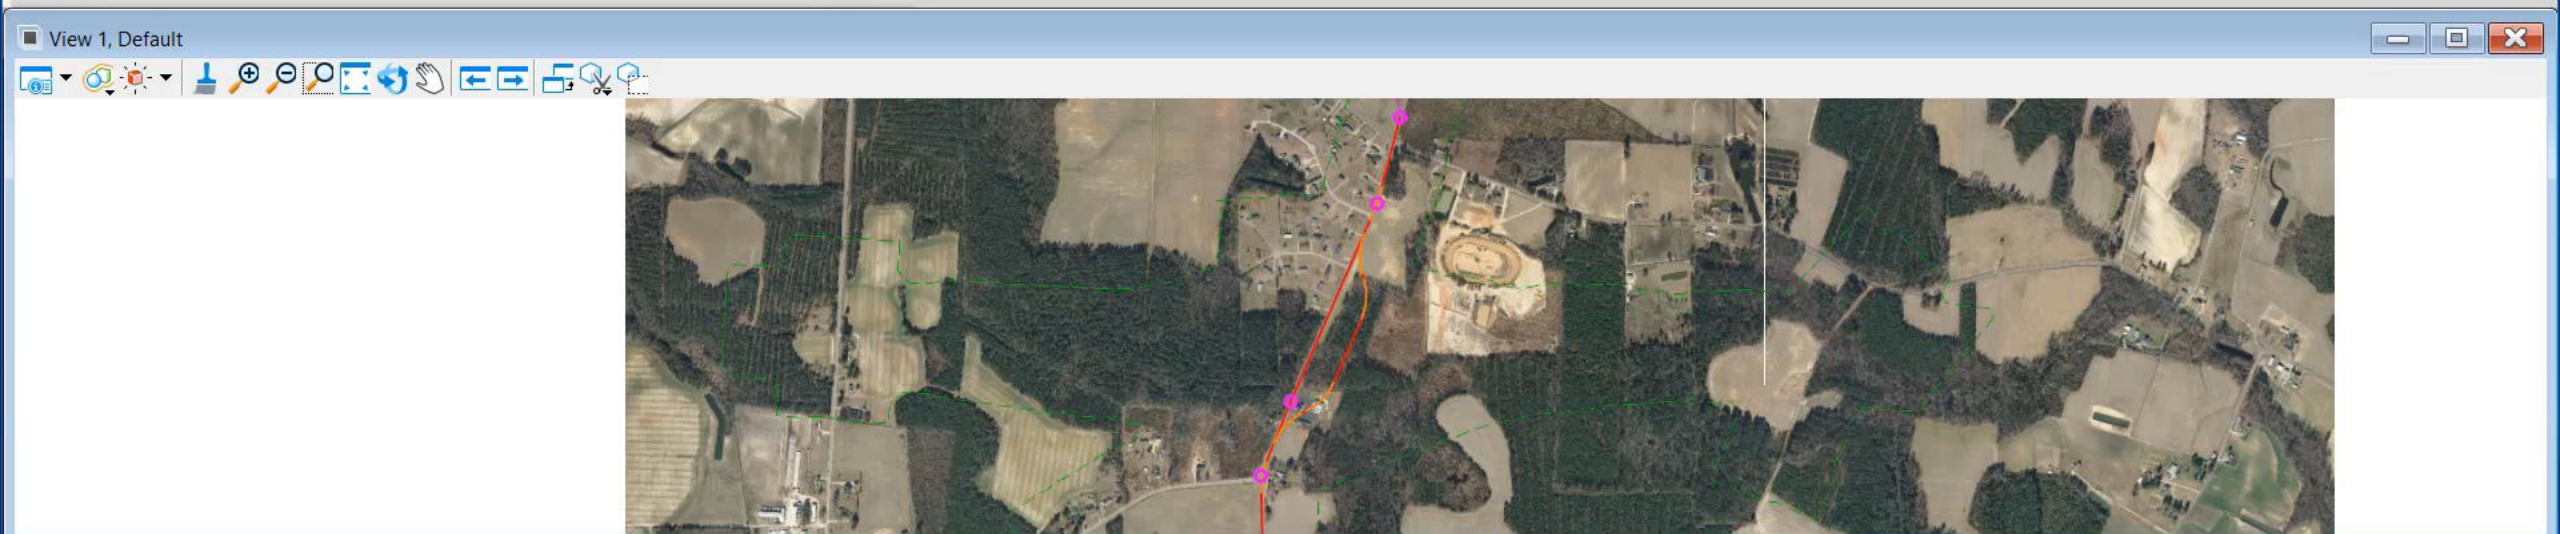

Horizontal Geometry Updates and Changes

Complex Redefine

What if I want to go back to my original horizontal alignment?


Answer:

Run the command again and select the old geometry as the redefining element

Horizontal Geometry Updates and Changes

Dynamic Updates

Simple changes to horizontal geometry can simply be made via the dynamic text and drag handles for easy in place editing

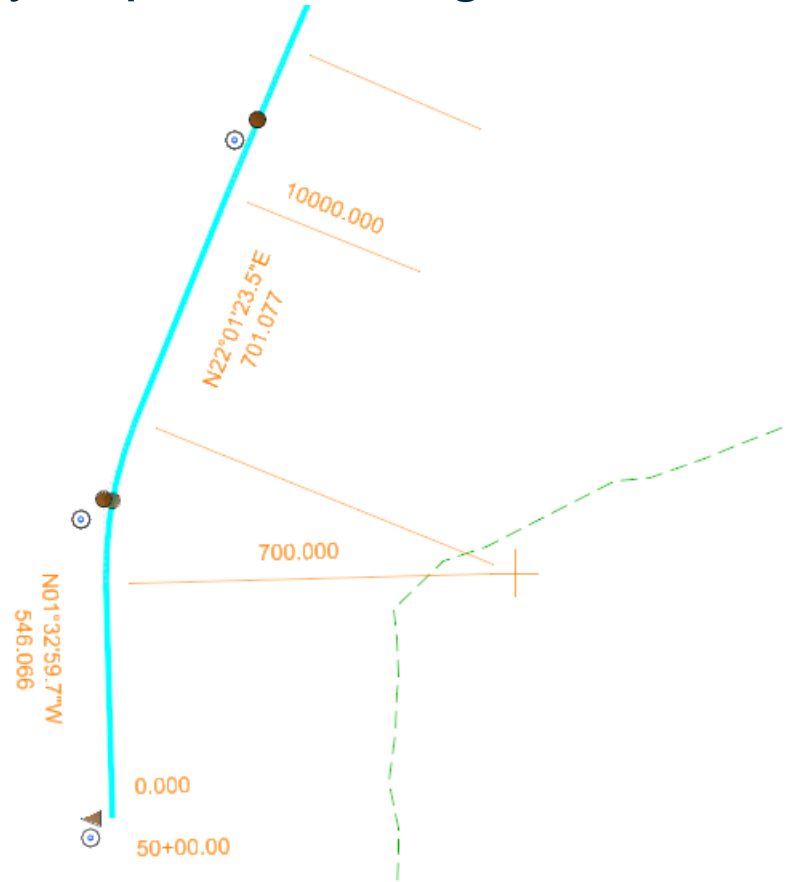

Drawing C:\Presentations\What Happens When Things Change\Geometry - Options.dgn [2D - V8 DGN] - OpenRoads Designer CONNECT Edition

File Home View Annotate Attach Analyze Curves Constraints Utilities Drawing Aids Content

Search Ribbon (F4)

None Default

Attributes

Geom_Baseline

Primary



Selection

Placement

Manipulate

Modify

Groups

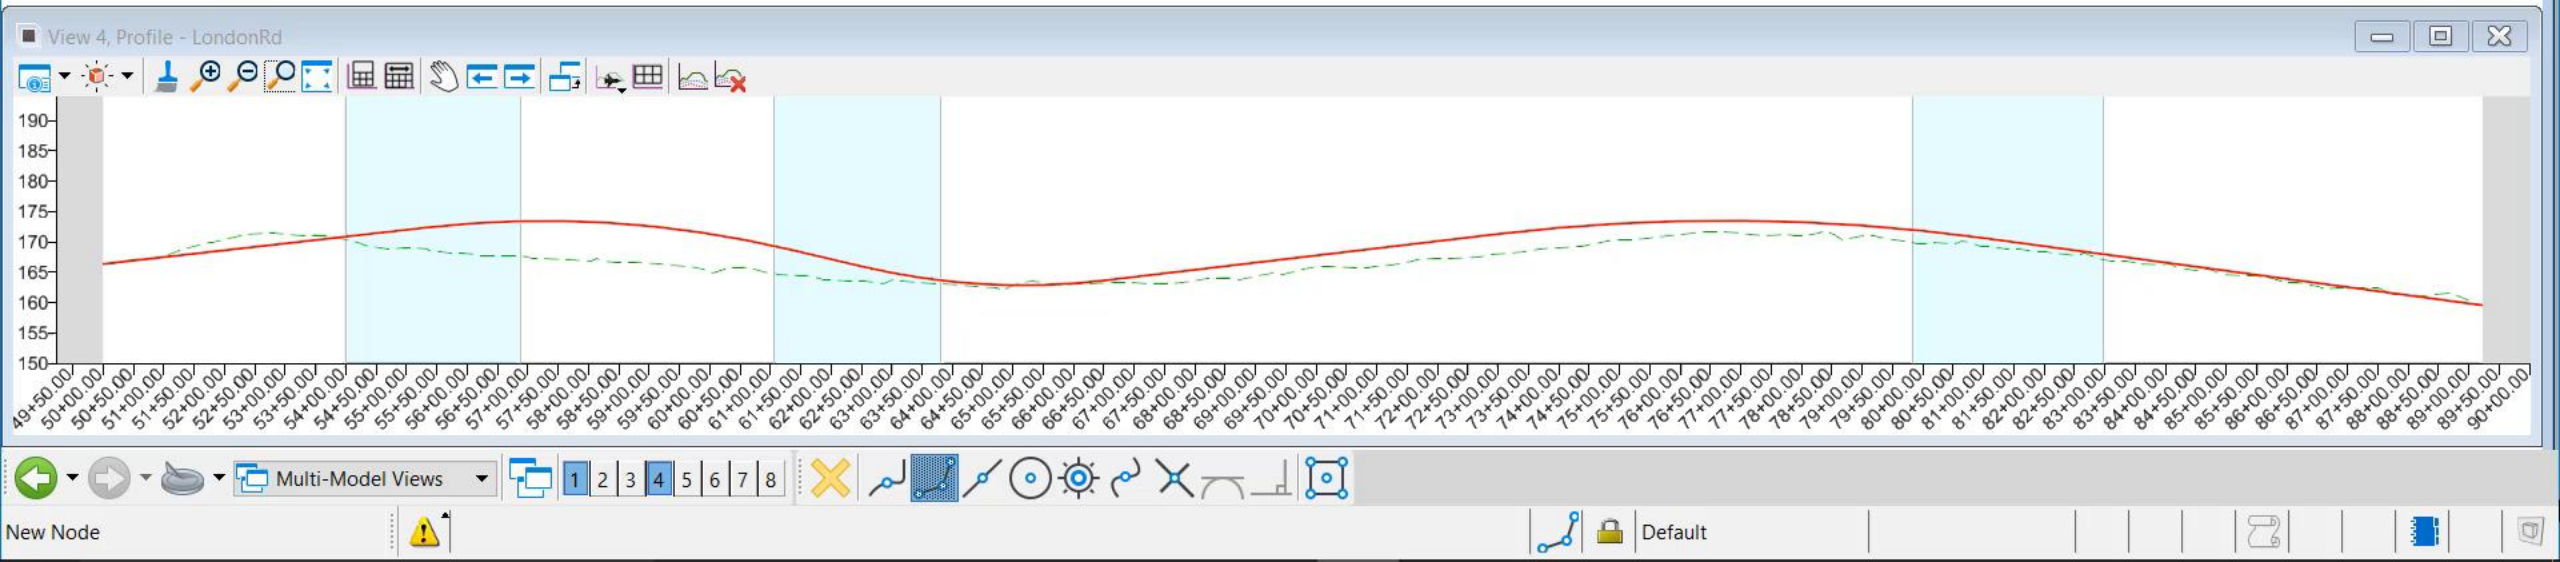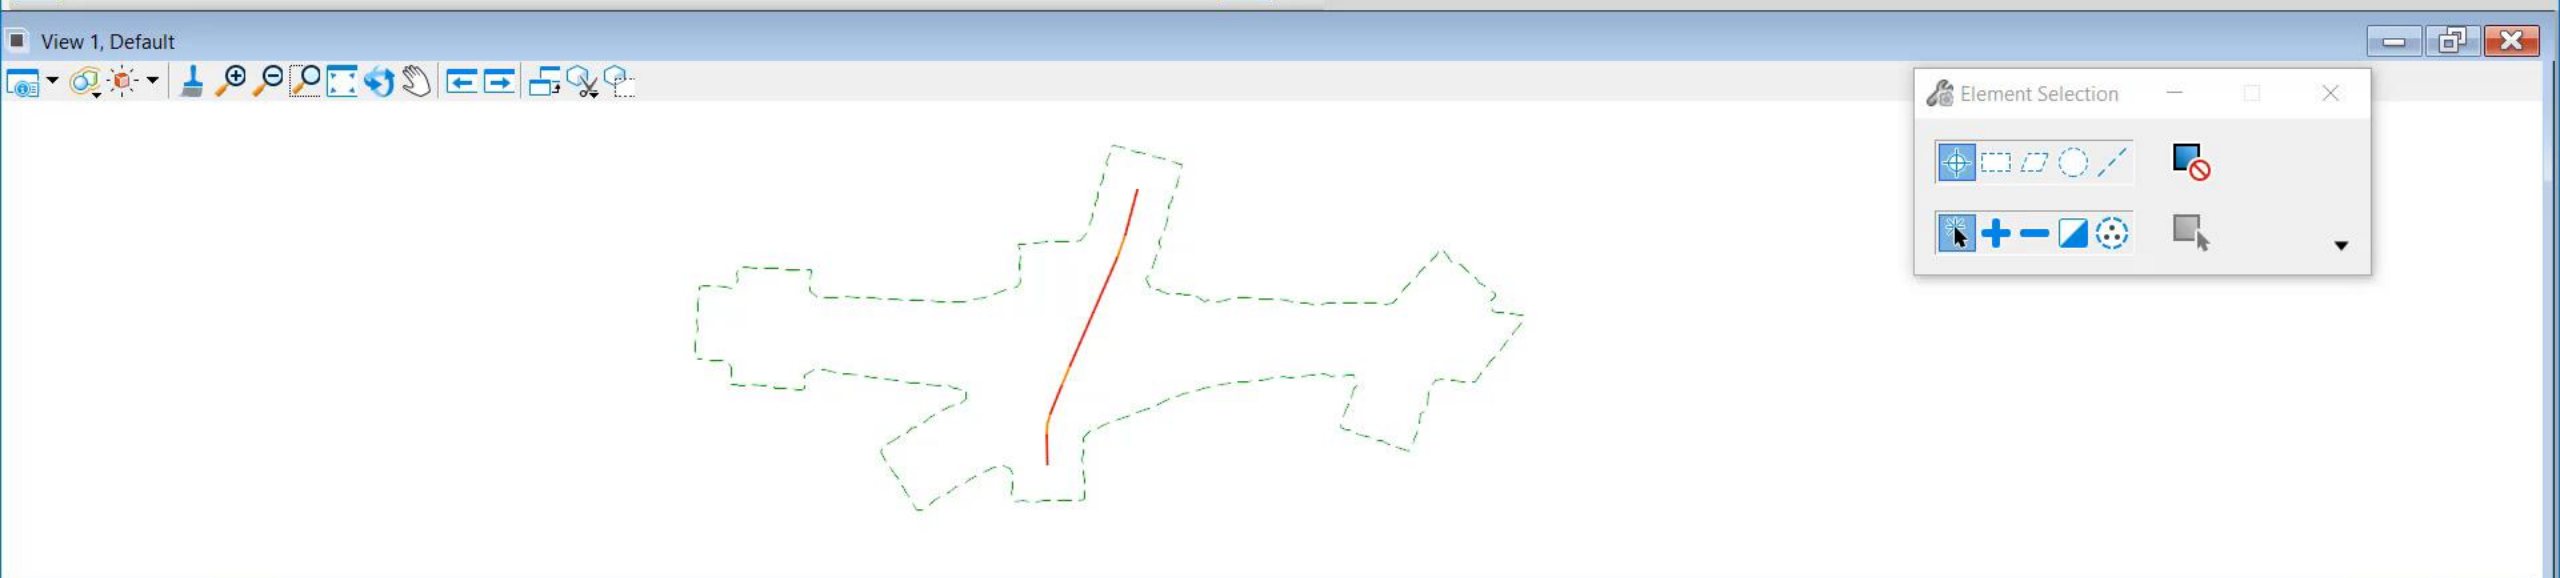

Vertical Geometry Updates and Changes

How To...

- Insert VPI
 - Use Insert Vertex to insert VPI to vertical alignment
- Delete VPI and Removes Curves
 - Use Delete Vertex to remove VPI's which in turn remove vertical curves
- Insert Curves
 - Use Profile Insert Curve tool if you need to insert a curve
- Append Elements
 - If you need to add additional elements to the beginning or end of alignment

FileHomeTerrainGeometryCorridorsModel DetailingDrawing ProductionDrawingView

Search Ribbon (F4)

Sign in

Element Selection

Import/Export

Design Elements

Standards

Civil Toggles

Reports

Lines

Arcs

Point

Offsets and Tapers

Reverse Curves

Spirals

Modify

Complex Geometry

Open Profile Model

Set Active Profile

Profile Creation

Lines

Curves

Complex Geometry


Element Profiles

Simplify Geometry

Complex Redefine

No Feature Definition

View 4, Profile - London Rd

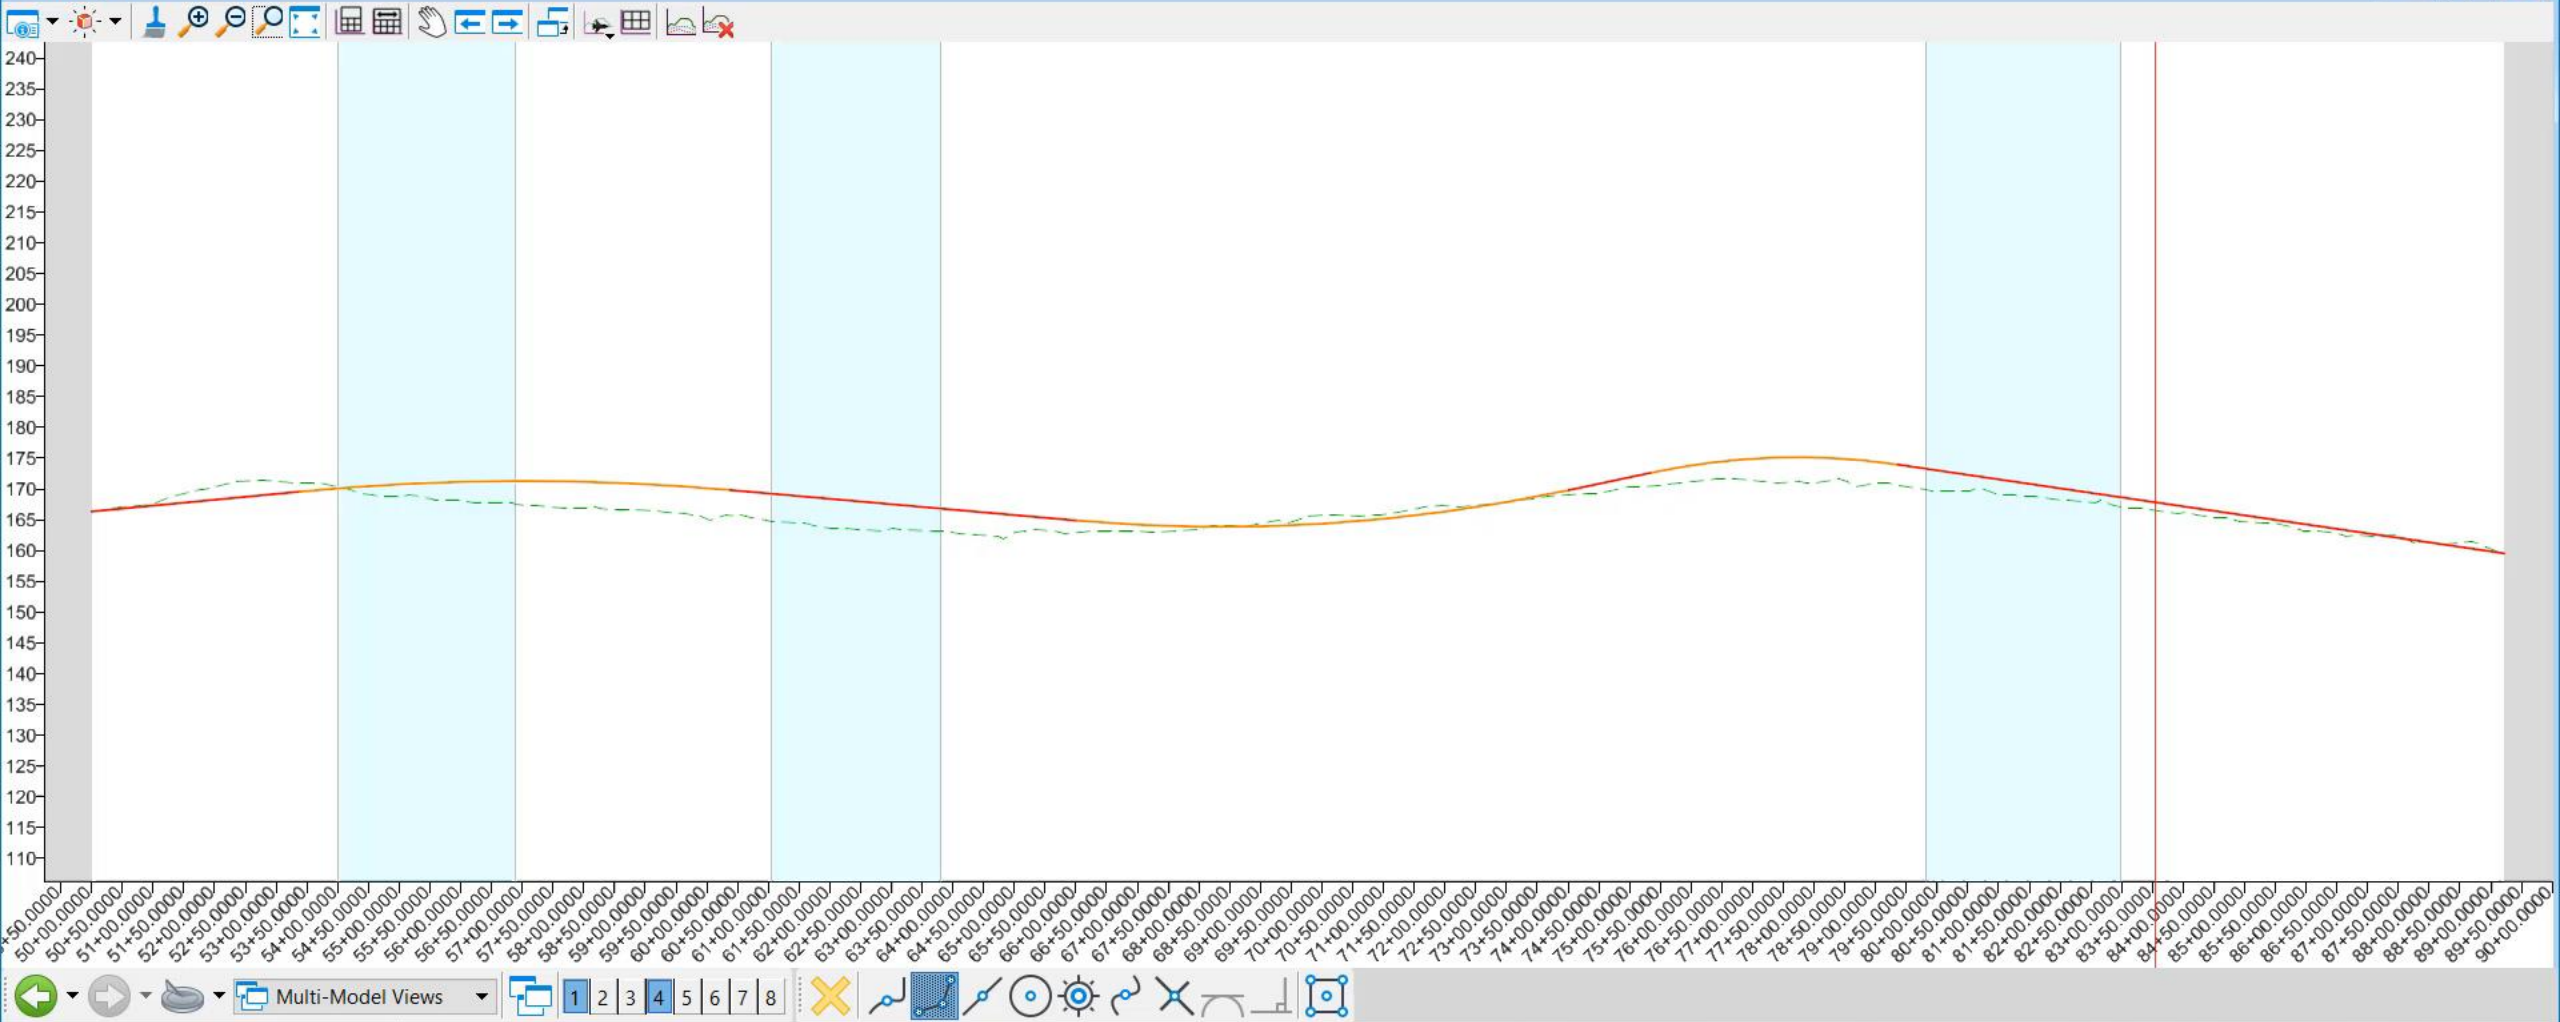


OpenRoads Modeling C:\Presentations\What Happens When Things Change\Geometry\Geom-LondonRd-ATC-1.dgn [2D - V8 DGN] - OpenRoads Designer CONNECT Edition

File Home Terrain Geometry Corridors Model Detailing Drawing Production Drawing View

Search Ribbon (F4) Sign in

Element Selection Import/Export Design Elements Standards Civil Toggles Reports Lines Arcs Point Offsets and Tapers Reverse Curves Spirals Modify Complex Geometry Open Profile Model Set Active Profile Profile Creation Lines Curves Complex Geometry Element Profiles Simplify Geometry Complex Redefine

Geom_Baseline

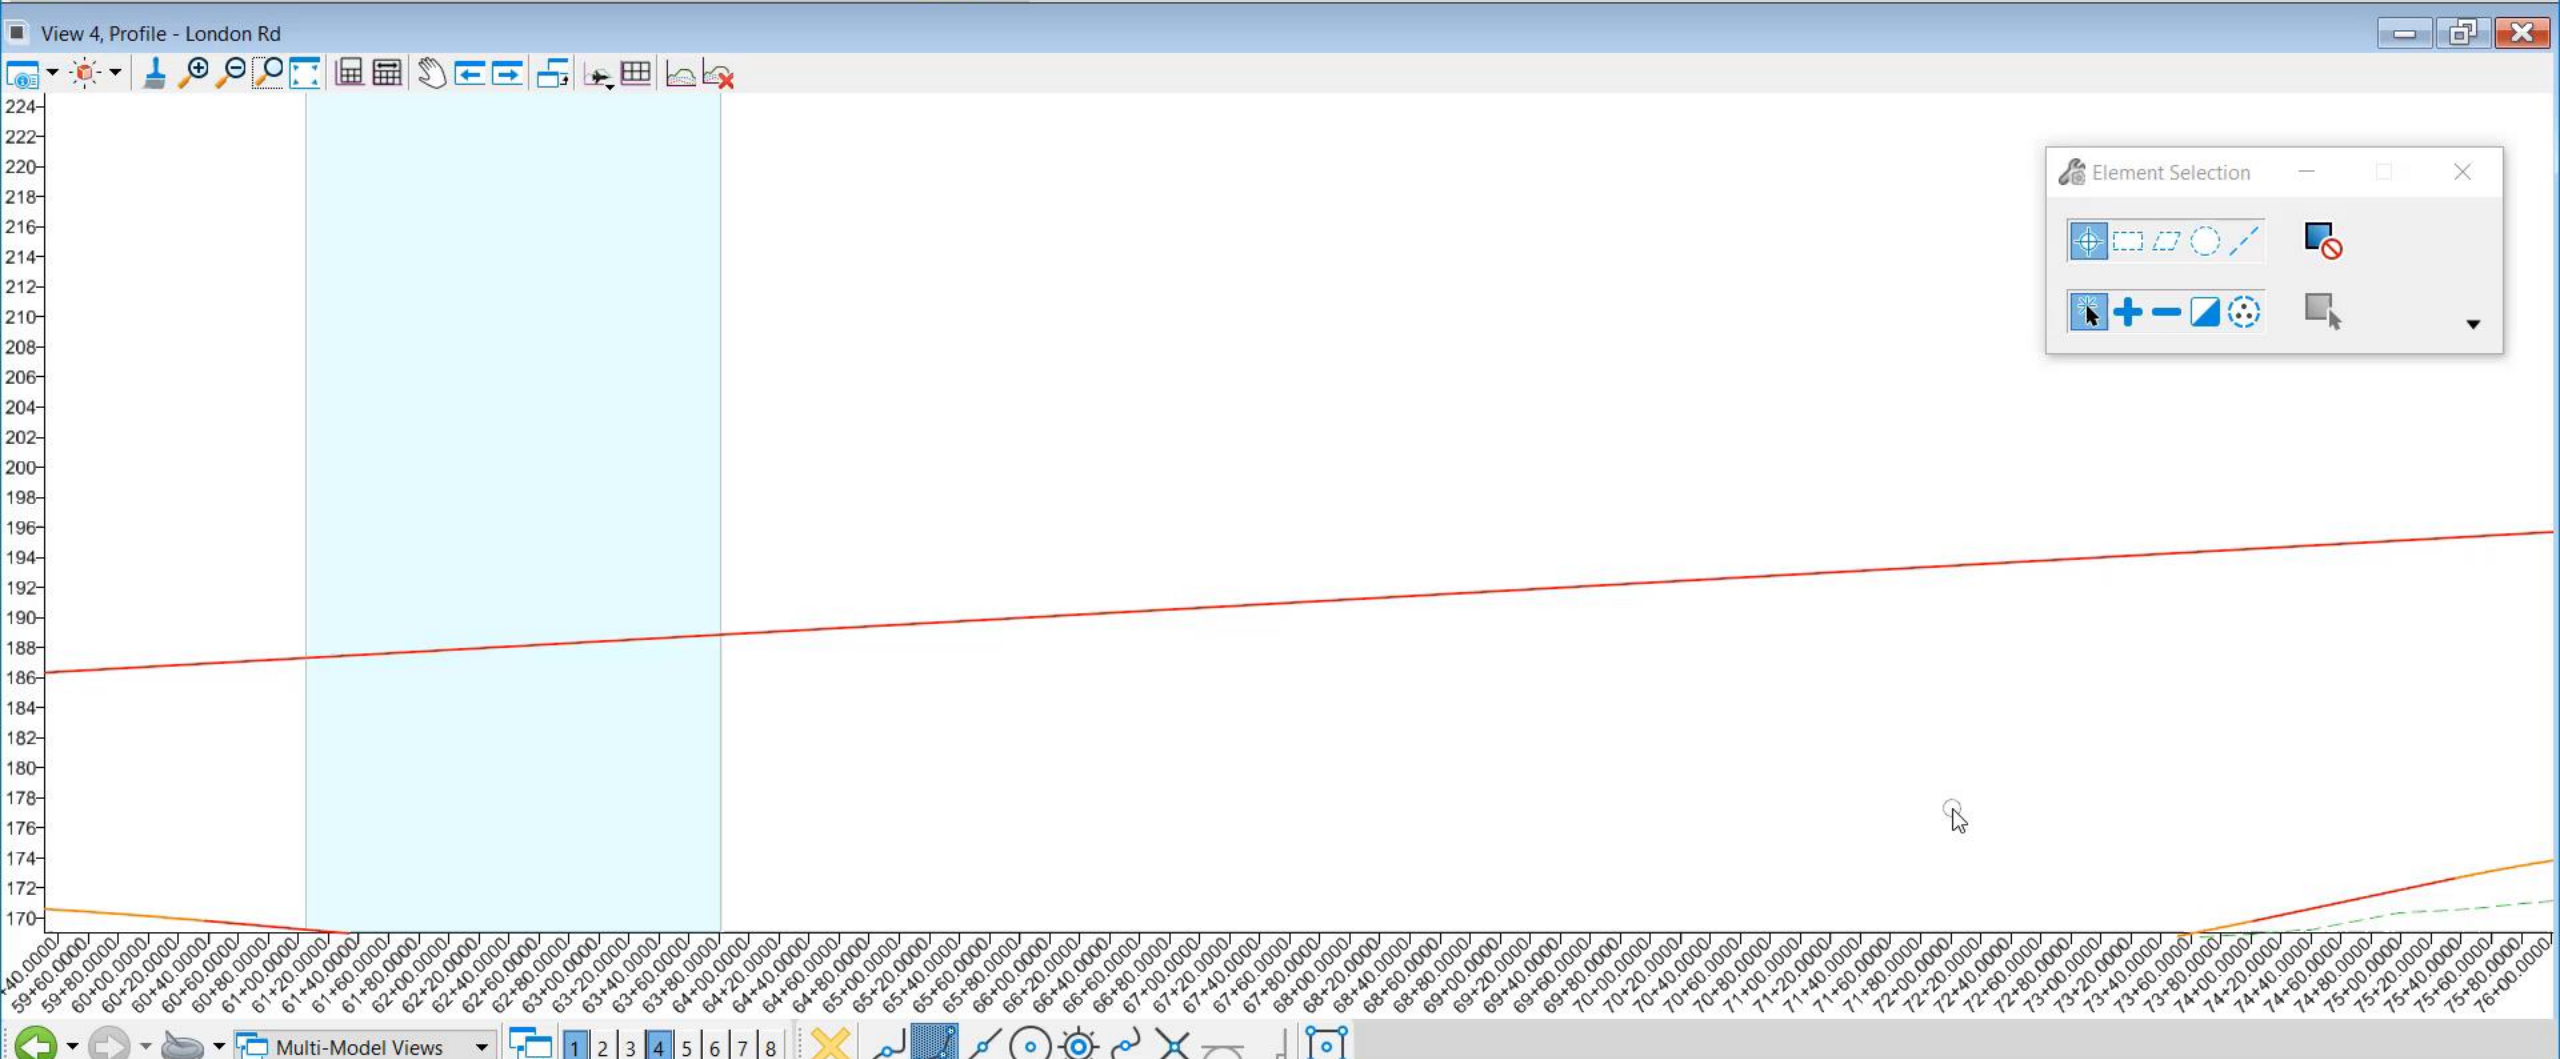

Element Selection


Selection tools: Point, Window, Crossing, Lasso, Polygon, Erase, Copy, Paste, Undo, Redo, Zoom In, Zoom Out, Pan, Rotate, Scale, Lock, Unlock, Hide, Show, Layer, Color, Style, Properties, Help, About.

Vertical Geometry Updates and Changes


How do I prevent my vertical alignment from updating when I make a change to the horizontal alignment?

If you don't want the vertical alignment to move or adjust when you make changes to horizontal elements:


1. Clear Active Profile

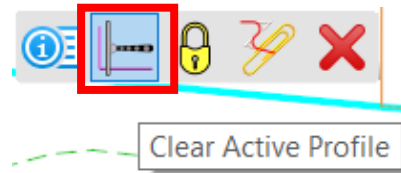

2. Use **Unlock** to prevent the vertical from adjusting

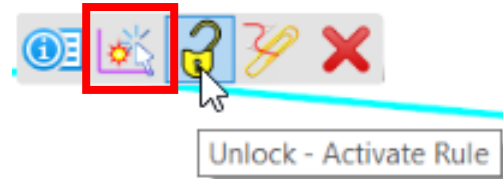

3. Use Civil Accudraw to place the vertical elements, this seems to keep the vertical elements in place when adjustments are made to the horizontal alignment

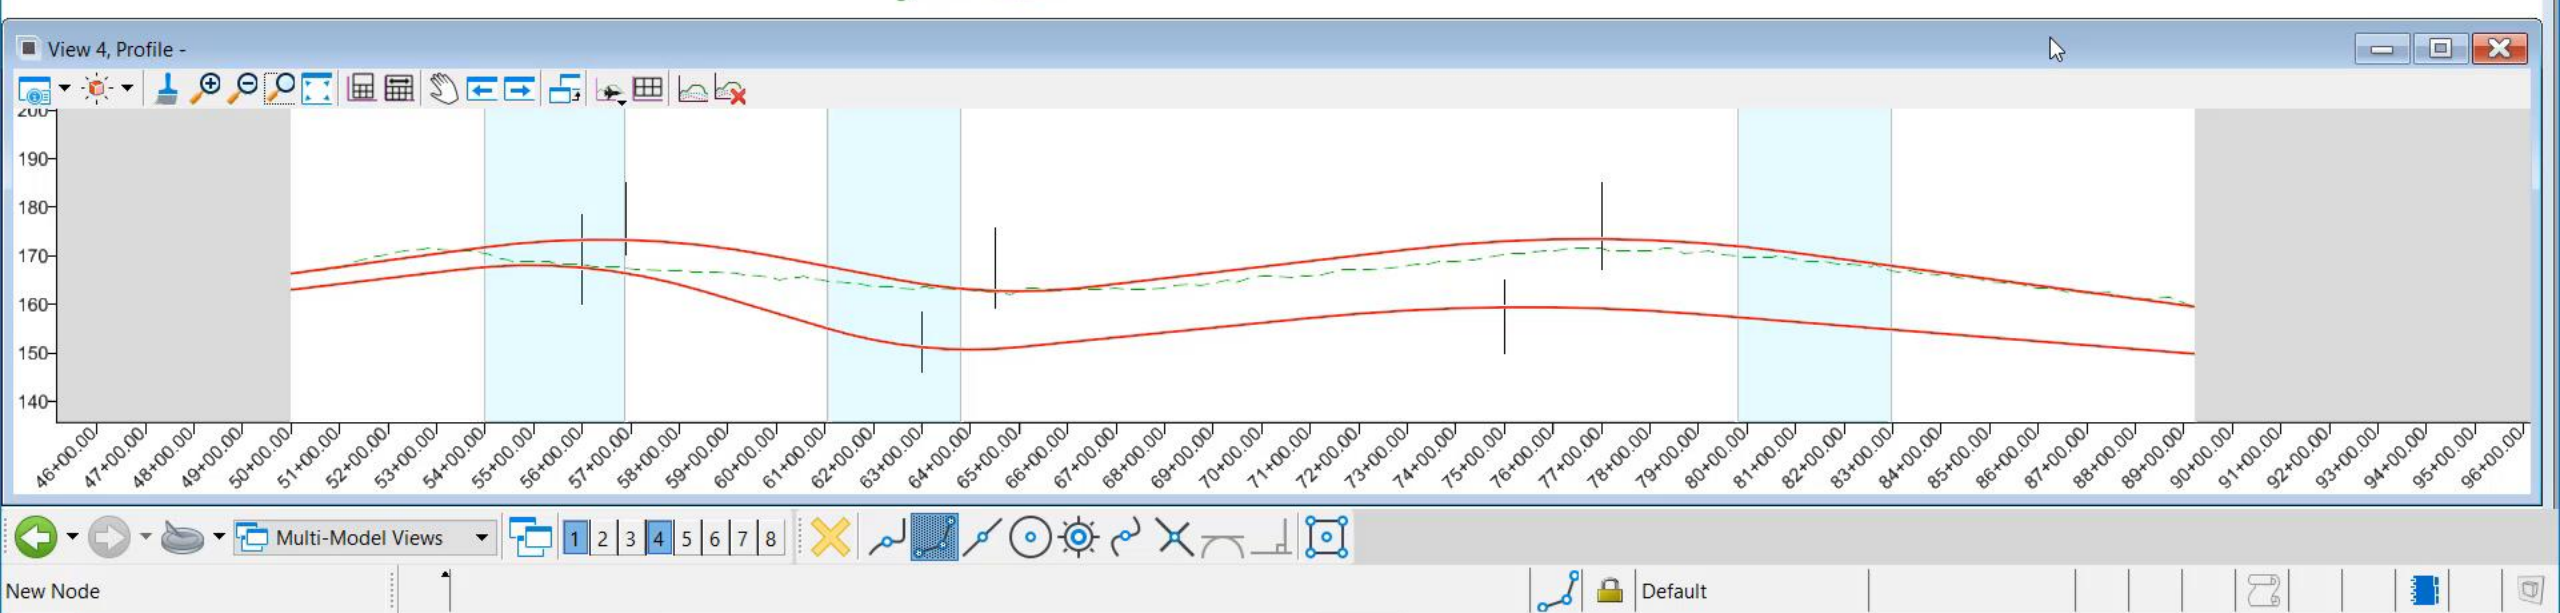

Superelevation Updates and Changes

What happens to superelevation calculations if the horizontal alignment changes?

- Superelevation will be re-calculated if it was created using the design standards rules file

What if I don't want my superelevation to update automatically?

Lock the Superelevation section prior to updating geometry



File Home Terrain Geometry Corridors Model Detailing Drawing Production Drawing View

Search Ribbon (F4)

Element Selection Selection

New Corridor New Template Drop

Copy Template Drop Import IRD Transitions Create

Template Edit

Edit Template Drop Edits


Define Target Aliasing Corridor References Corridor Clipping Miscellaneous

Create Calculate Superelevation


Dynamic Sections 3D Drive Through Corridor Reports Review

No Feature Definition

View 1, Default

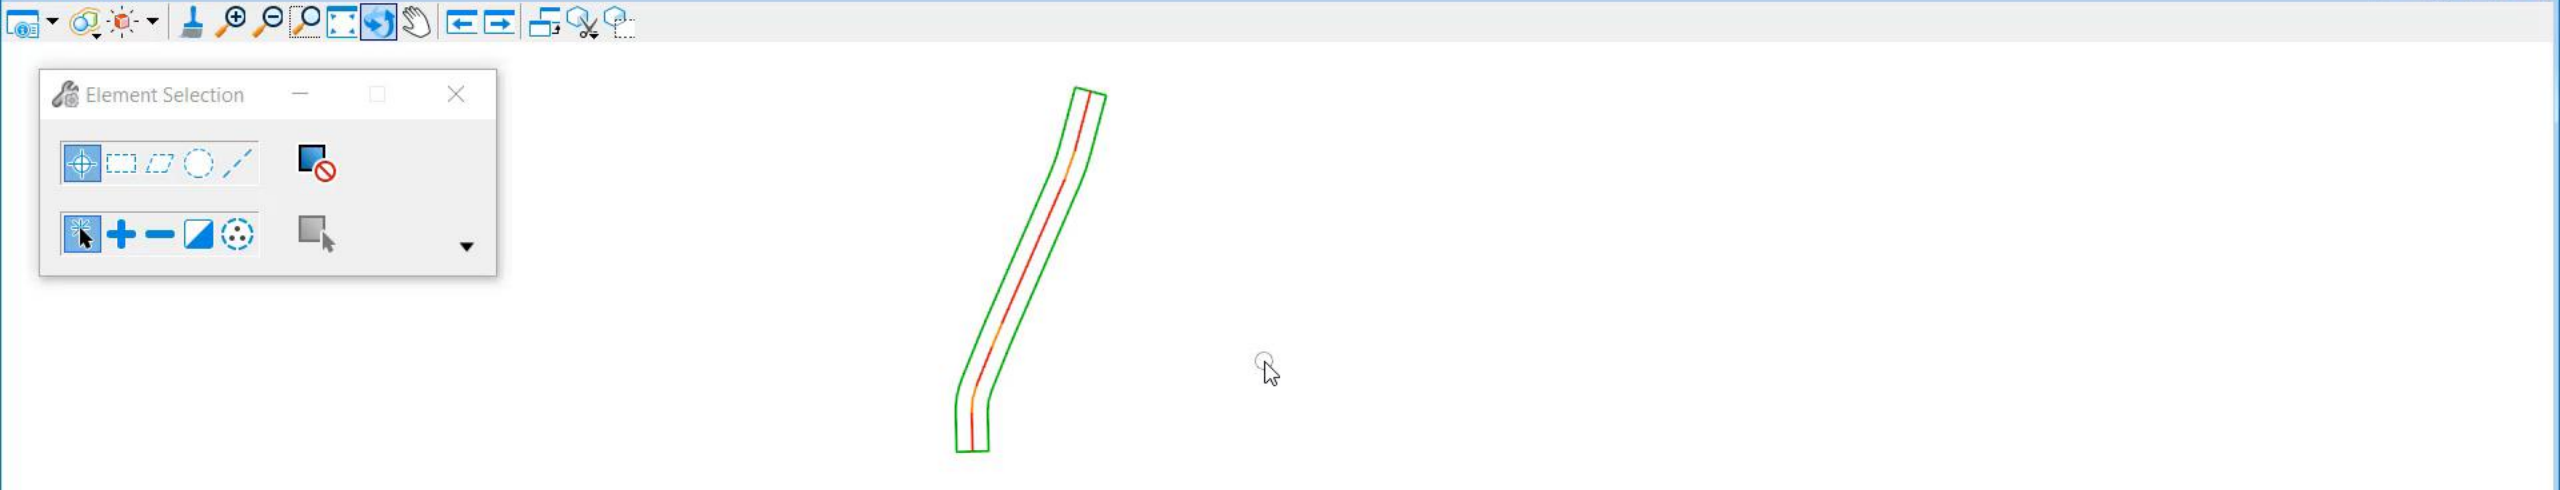

View 8, Superelevation - LondonRd

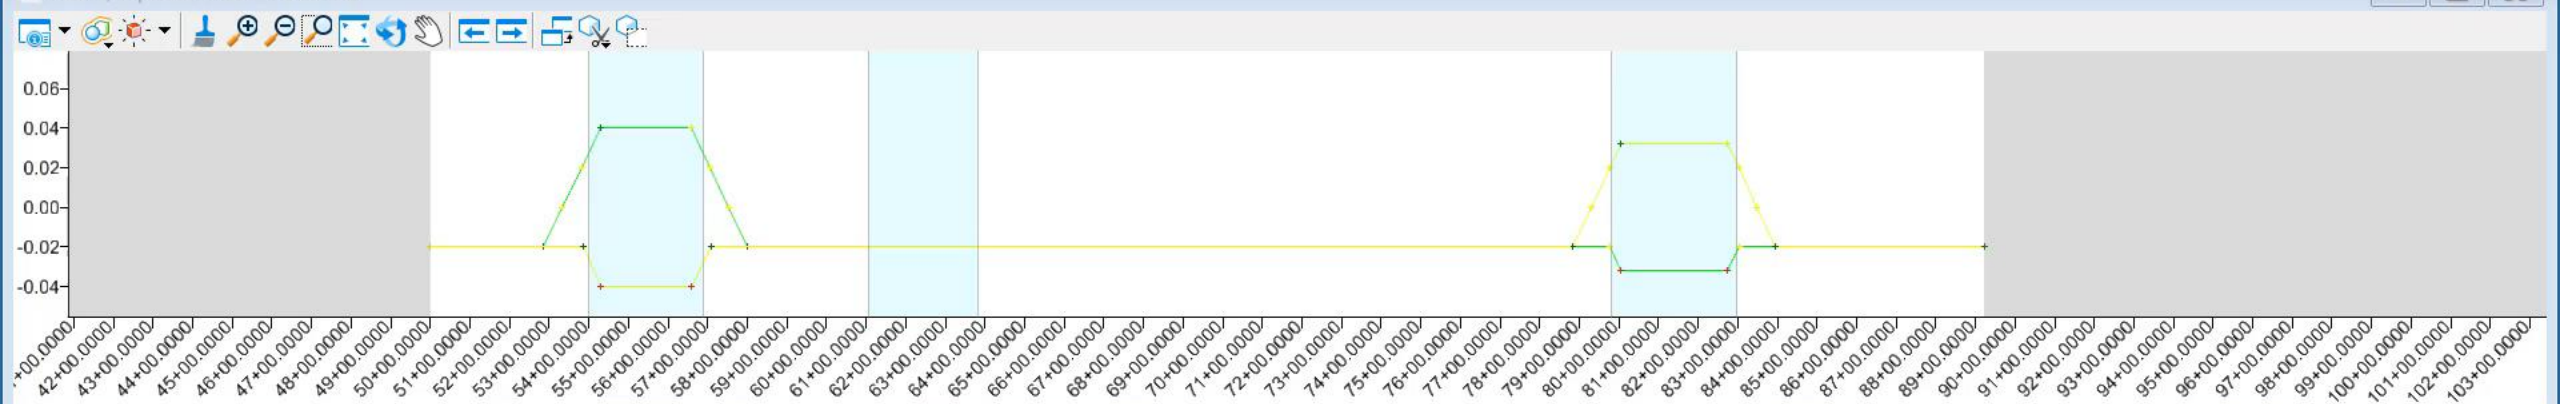

Multi-Model Views


1 2 3 4 5 6 7 8

Element Selection > Identify element to a

Default

Corridors and Templates

- As we saw previously, when the horizontal geometry changes the Corridor will follow the new geometry
- Corridors update when horizontal and vertical geometry changes

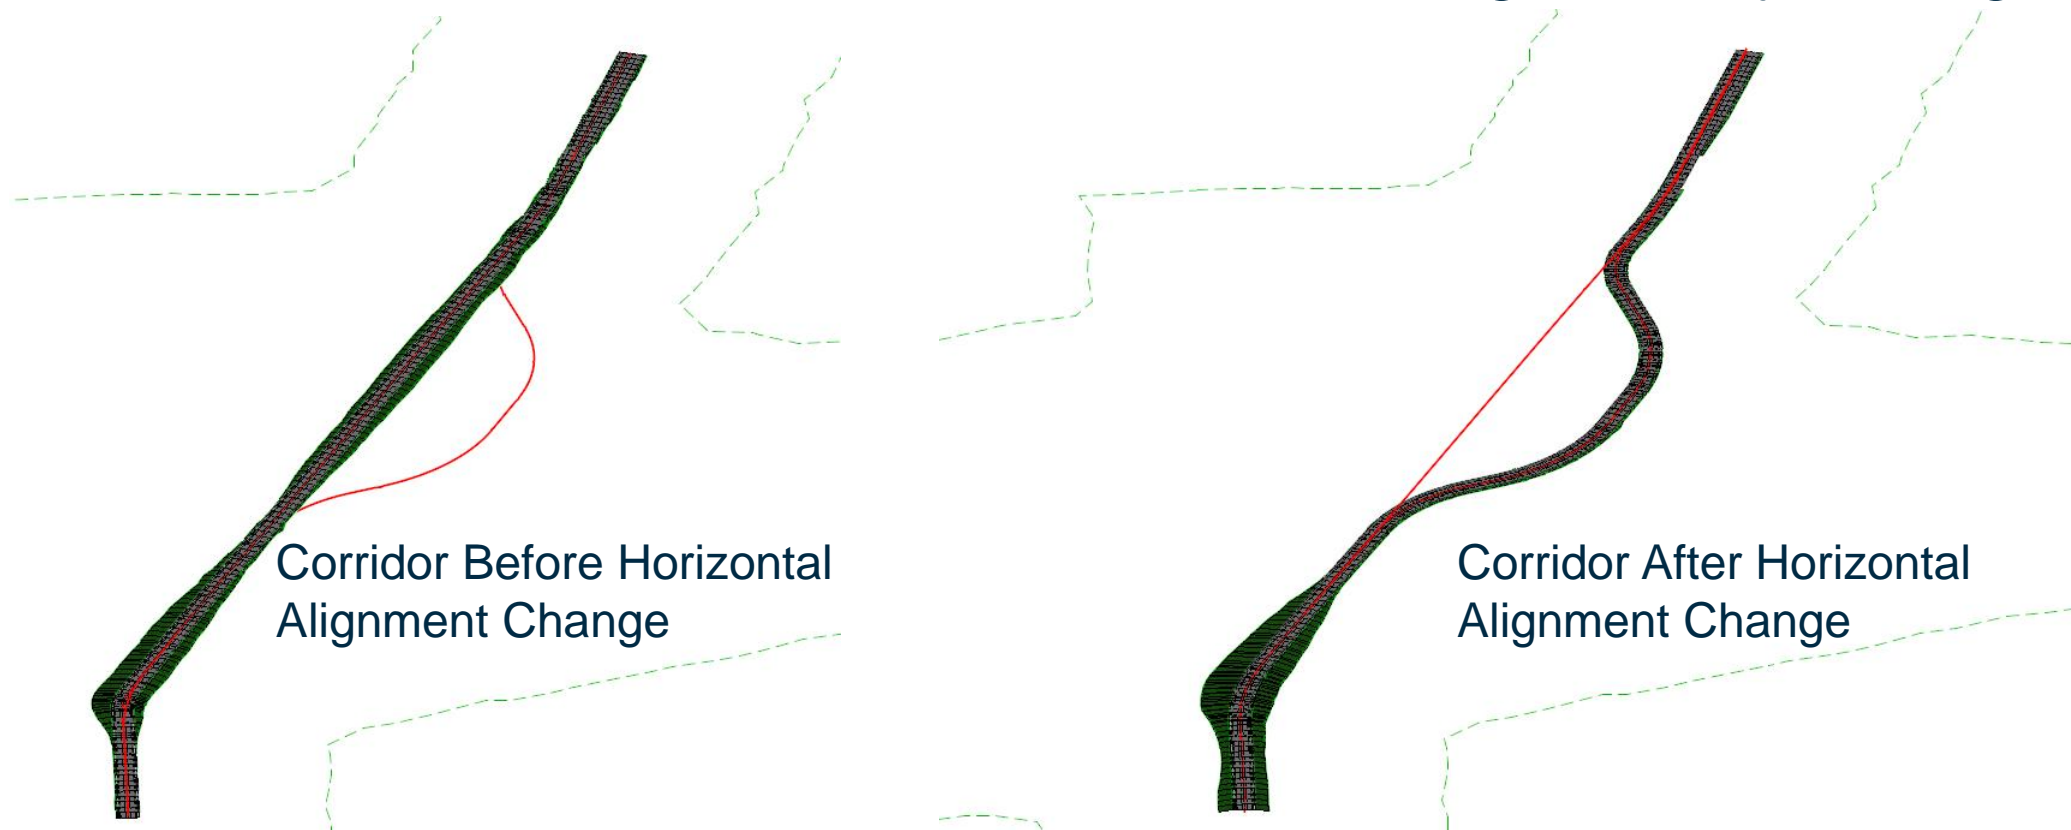

Corridors and Templates

- As we saw previously, when the horizontal geometry changes the Corridor will follow the new geometry
- Corridors update when horizontal and vertical geometry changes

What happens to template drops, point controls, parametric constraints, etc?

Corridor Objects - LondonRd

Template Drop

Secondary Alignment

Key Station

Parametric Constraint

Horizontal ...	Template N...	Interval	Description	Start Station	End Station
	Project Temp...	25.000		50+00.0000	84+00.0000
	Project Temp...	25.000		84+00.0000	89+21.9240

Corridor Objects - LondonRd

Template Drop



Secondary Alignment

Key Station

Parametric Constraint

Point Control

Enabled	Control Des...	Mode	Control Type	Use as Sec...	Priority	Start Station	End Station
True		Vertical	Superelevation		1	50+00.0000	89+21.9240
True		Vertical	Superelevation		1	50+00.0000	89+21.9240



The End

Questions?